


A-MP★ INTER-CONTACT KEYING PLUG
NO. 583274-1
FOR AMP-LEAF★ CONNECTORS

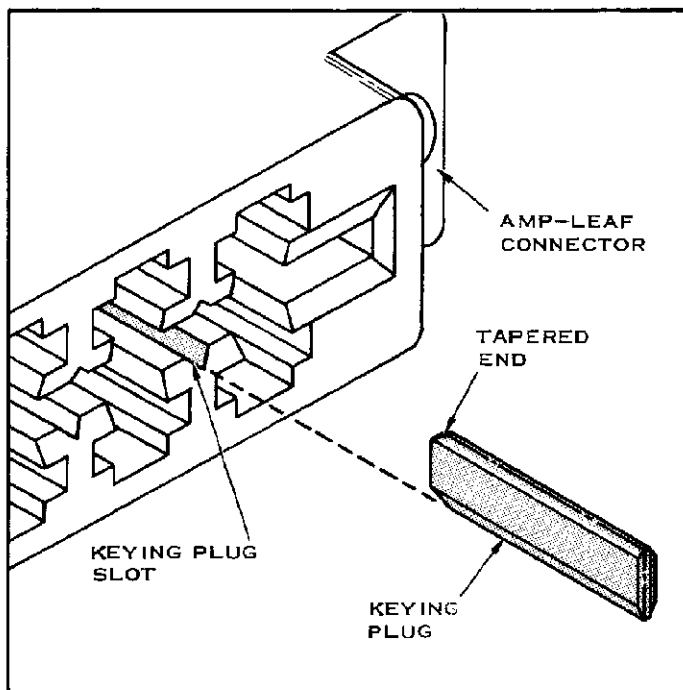

NO. OF POSITIONS	PART NUMBER	NO. OF POSITIONS	PART NUMBER
8	582140	18	582191
10	582963	22	480142
15	582147	22	582627
15	480110	22	583273
15	582500	25	583167
18	480133	30	480146

FIGURE 1

The Inter-Contact Keying Plug is inserted into small slots, between the Contact Cavities of the AMP-LEAF Connectors listed in Figure 1.

1. Grip the Keying Plug with Needle-nosed Pliers (Figure 2), the tapered end of the Keying Plug pointed toward the Connector.

2. Insert the Keying Plug into the Slot as far as it will go.

NOTE

Do not insert or remove Keying Plugs from Connectors that are loaded with Contacts, unless absolutely necessary. If Keying Plugs must be removed, be careful not to scrape or damage the Contacts.

3. To remove the Keying Plug, use the same Pliers. Simply pull the Plug out of the Connector.

4. Cut a Slot in the mating Printed Circuit Board to accept the Keying Plug. Figure 3.

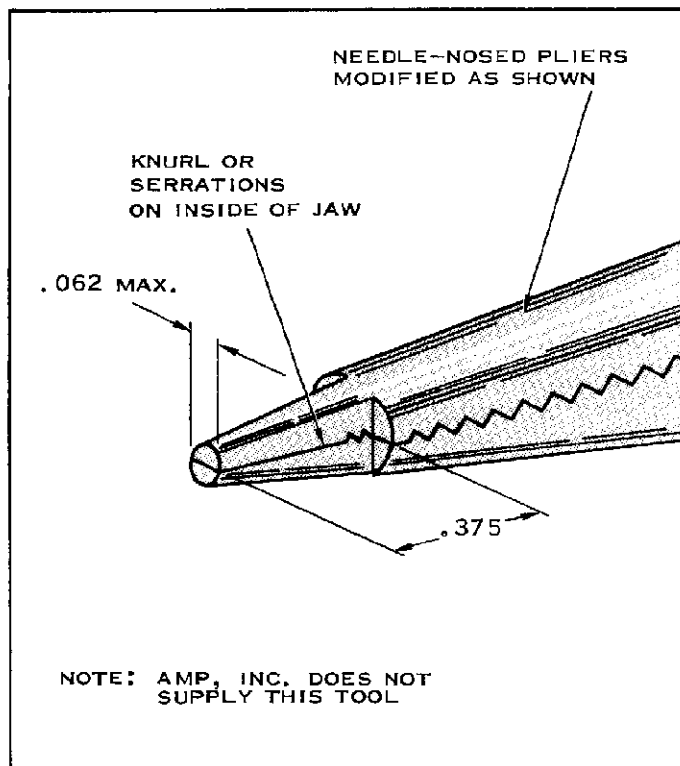


FIGURE 2

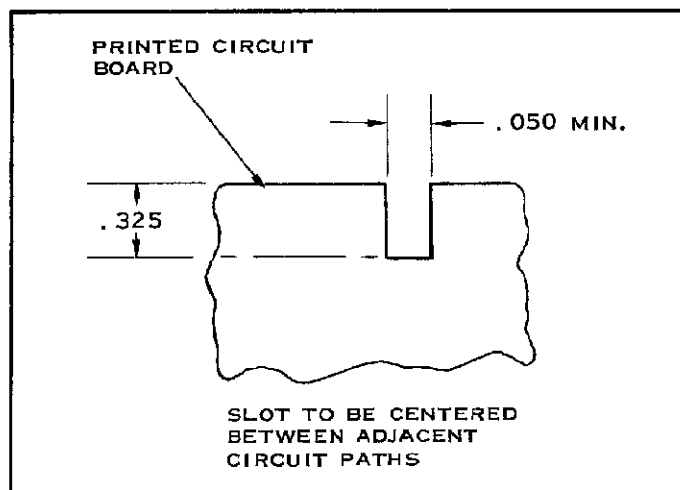


FIGURE 3