

AMP* N SERIES JACK CONNECTORS 228448-1 AND 228658-1



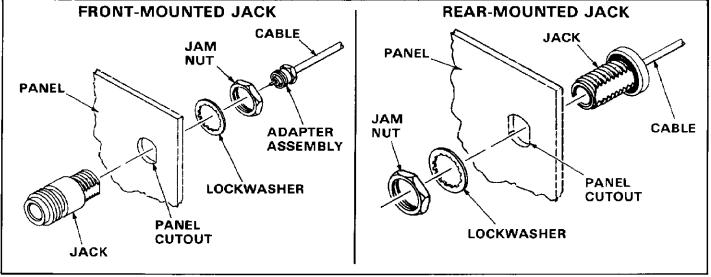


Fig. 1

1. INTRODUCTION

This instruction sheet (IS) covers the use of the AMP N Series Front-Mounted Jack Connector 228448-1 and Rear-Mounted Jack Connector 228658-1. The jacks are used with Type RG-402/U (.141) semi-rigid cable. Read these instructions thoroughly before using the jacks.

NOTE

All dimensions on this instruction sheet are in inches.

2. DESCRIPTION (Figure 1)

The connectors consist of a jack assembly, a jam nut, lockwasher, and adapter assembly 228446-1. The lockwasher and jam nut secure the jack to the panel, and the adapter assembly threads the jack to the cable.

3. TOOL SELECTION

A. Hand Tool 59980-1

Refer to AMP Instruction Sheet IS 6788 for infor-

mation concerning application of the adapter assembly with AMP Hand Crimping Tool 59980-1. Use AMP Crimping Dies 312253-1 and AMP Plug Locator 220220-2 with the hand crimping tool.


B. Pneumatic Tool 220239-1

Refer to AMP Instruction Sheet IS 2942 for information concerning application of the adapter assembly with AMP Pneumatic Tool 220239-1. Use AMP Crimping Dies 220243-1 and AMP Plug Locator 220241-1 with the pneumatic tool.

4. APPLICATION PROCEDURE

A. Front-Mounted Jack

- 1. Prepare cable and make the panel cutout as shown in Figure 2.
- 2. Slide adapter assembly over cable and crimp with the selected crimping tool.
- 3. Insert jack connector into panel cutout and secure with lockwasher and jam nut.

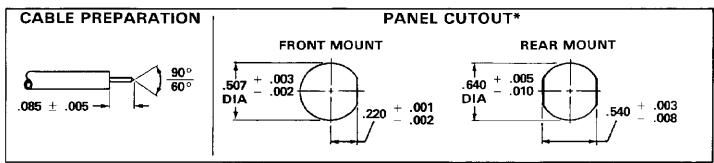

^{* .250-}IN. (Max) PANEL THICKNESS

Fig. 2

4. Thread adapter assembly and cable into jack and tighten assembly with a torque wrench to a torque of 7 to 10 in.-lb.

B. Rear-Mounted Jack

1. Prepare the cable and adapter assembly

according to Steps 1 and 2 of Paragraph 4, A.

- 2. Thread adapter assembly into jack, and insert jack into panel cutout.
- 3. Secure the jack to the panel with the lock-washer and jam nut.