

NOTE

Section I of this instruction sheet covers the contacts and application procedures recommended for the A-MP Hand Crimping Tool 90263-1.

Section II covers the Maintenance and Inspection procedures recommended by AMP to assure reliability of A-MP hand tools and each application.

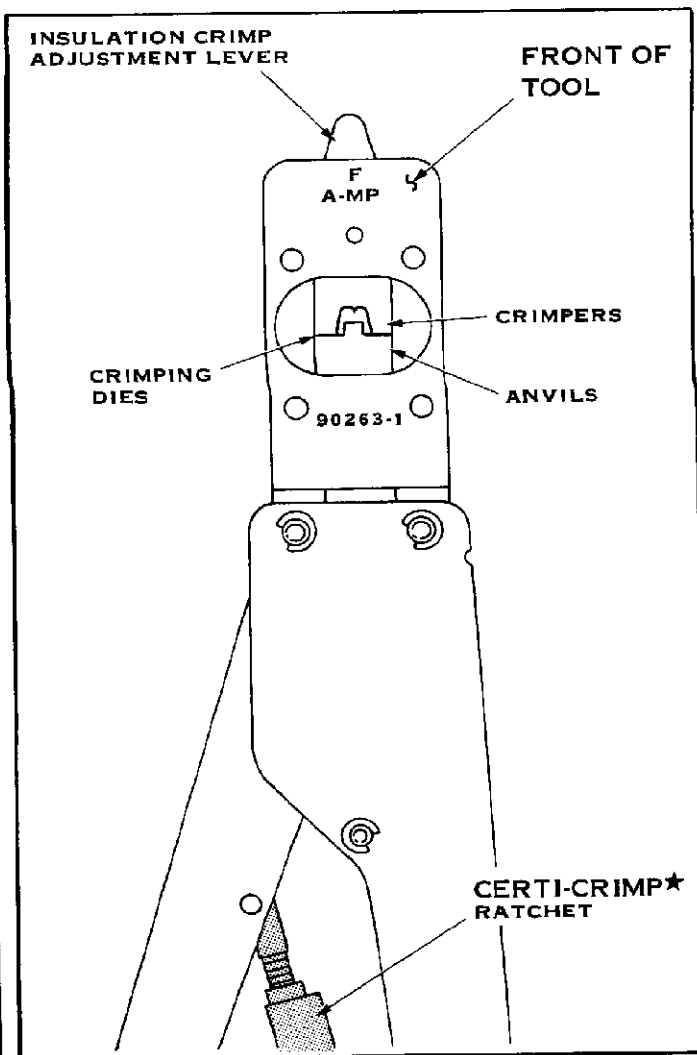


FIGURE I-1
SECTION I APPLICATION

I-1. INTRODUCTION

The A-MP Hand Crimping Tool 90263-1 is designed to crimp the .187 FASTON★ Receptacle Contact shown in Figure I-2. Read these instructions thoroughly before crimping any contacts.

I-2. DESCRIPTION

This tool has two fixed dies (Crimpers) and two moveable dies (Anvils). These dies are designed to crimp only the contacts shown in Figure I-2.

Each tool features an Insulation Crimp Height Adjustment a Contact Locator-Insulation Stop and a CERTI-CRIMP Ratchet.

The Insulation Crimp Height Adjustment controls the Crimp Height of the Contact Insulation Barrel. It can be set by placing the Adjustment Lever in any one of three positions: (1) small, (2) medium, and (3) large.

The Contact Locator-Insulation Stop has two functions as the name implies. First it is used to position the contact between the tool's crimping dies and second it aids in locating the wire in the contact. In use it is positioned in the Contact Locator Slot. See Figure I-2.

The CERTI-CRIMP Ratchet is calibrated to ensure the Crimp Height specified for the contacts listed in Figure I-2. Note that once engaged, the ratchet will not release until the tool handles have been fully closed.

CAUTION

The crimping dies bottom before the CERTI-CRIMP Ratchet releases. This is a design feature that assures maximum electrical and tensile performance of the crimp. Do not re-adjust the ratchet, otherwise, an improperly crimped contact will result. See Section II of this Instruction Sheet.

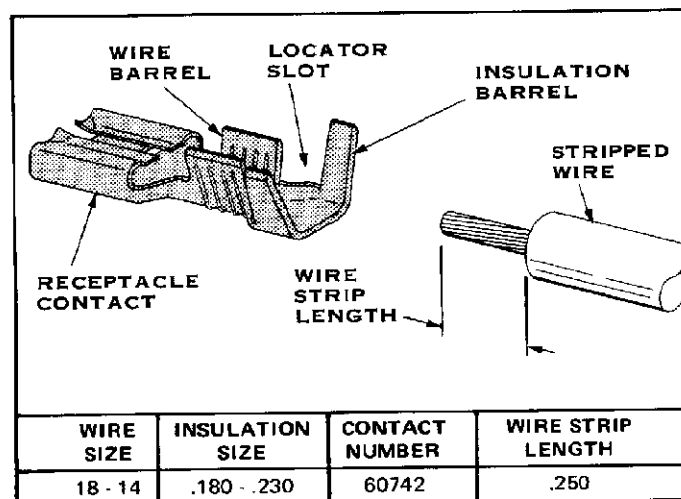


FIGURE I-2

Copyright 1972 by AMP Incorporated, Harrisburg, Pa. All International Rights Reserved. AMP Incorporated products covered by U.S. and Foreign patents and/or patents pending.

I-3. CRIMPING PROCEDURE

Using the chart in Figure I-2, select wire within the specified Wire Size and Insulation Size. Strip the wire to the length shown — do NOT cut or nick the wire strands.

Proceed as follows:

1. Hold the tool so the BACK of it is facing you. See Figure I-3.
2. Squeeze the Tool Handles and allow them to open fully.
3. Looking straight into the crimping dies from the Back of the tool, insert a contact (Insulation Barrel first) into the FRONT of the tool. See Figure I-3.
4. Align the Contact Locator Slot with the tool's Contact Locator-Insulation Stop.

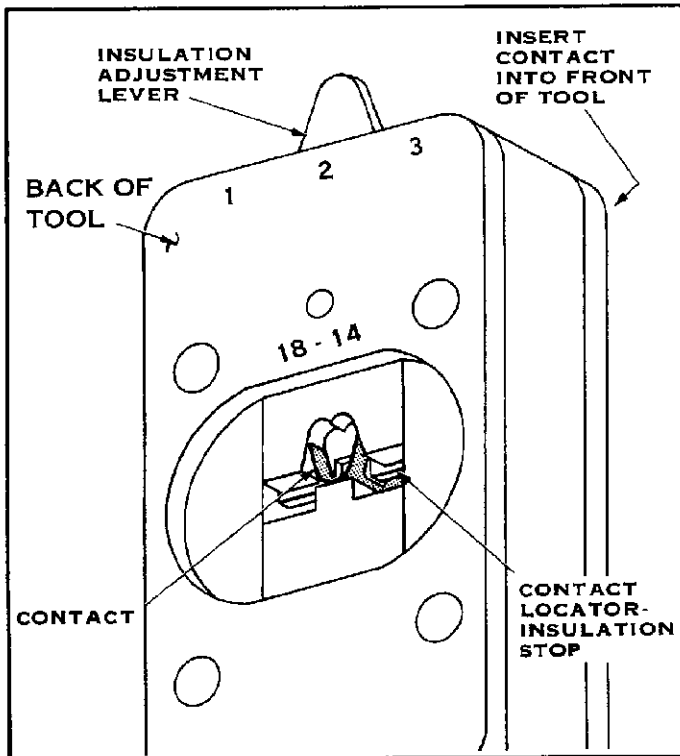


FIGURE I-3

5. Hold the contact in position and squeeze the tool handles until the Insulation Anvils start entry into the Crimpers. *Do not deform the Insulation Barrel or Wire Barrel.* See Figure I-4.
6. Insert a properly stripped wire through the Locator Wire Slot and into the Contact Wire Barrel until the wire's Insulation butts against the Contact Locator-Insulation Stop. See Figure I-4.

7. Hold the wire in place and squeeze the tool handles until the CERTI-CRIMP Ratchet releases.
8. Allow the tool handles to open fully and remove the crimped contact.

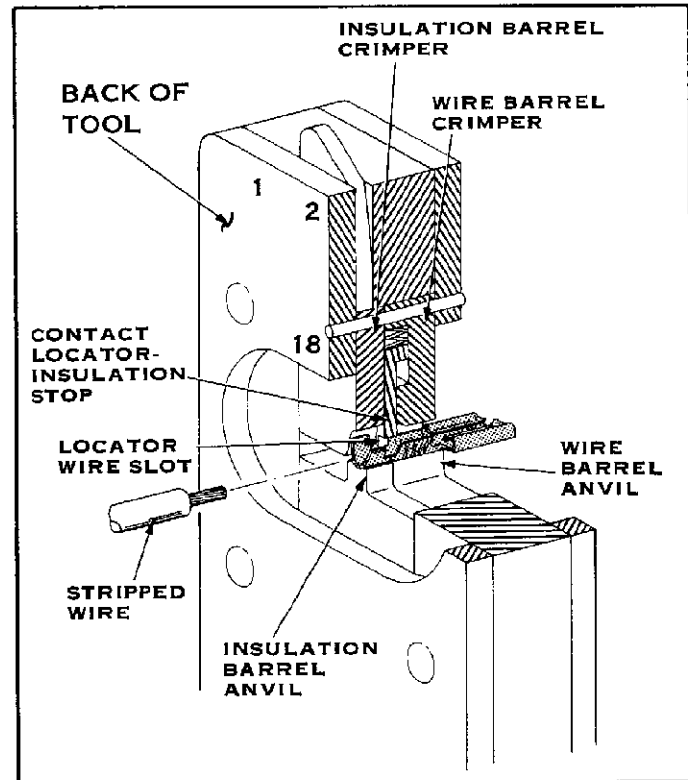


FIGURE I-4

I-4. INSULATION CRIMP ADJUSTMENT

The Insulation Barrel Crimp Height is controlled by the Insulation Adjustment Lever. To determine the right setting, crimp a few contacts using each of the three settings (1-small, 2-medium, and 3-large). Check the insulation crimp after each crimp is made. The crimp should be tight enough to hold the insulation firmly without cutting into it.

I-5. DAILY MAINTENANCE

Remove all foreign particles with a clean, soft brush or clean, soft, lint-free cloth. Make sure the proper retaining pins are in place and secured with the proper retaining rings. If foreign matter cannot be removed easily, or if the proper replacement parts are not available, return the tool to your supervisor.

Make certain all pivot points and bearing surfaces are protected with a THIN coat of any good S.A.E. No. 20 Motor Oil. Do not oil excessively. When the tool is not in use, keep the handles closed to prevent objects from becoming lodged between the crimping dies and store the tool in a clean, dry area.

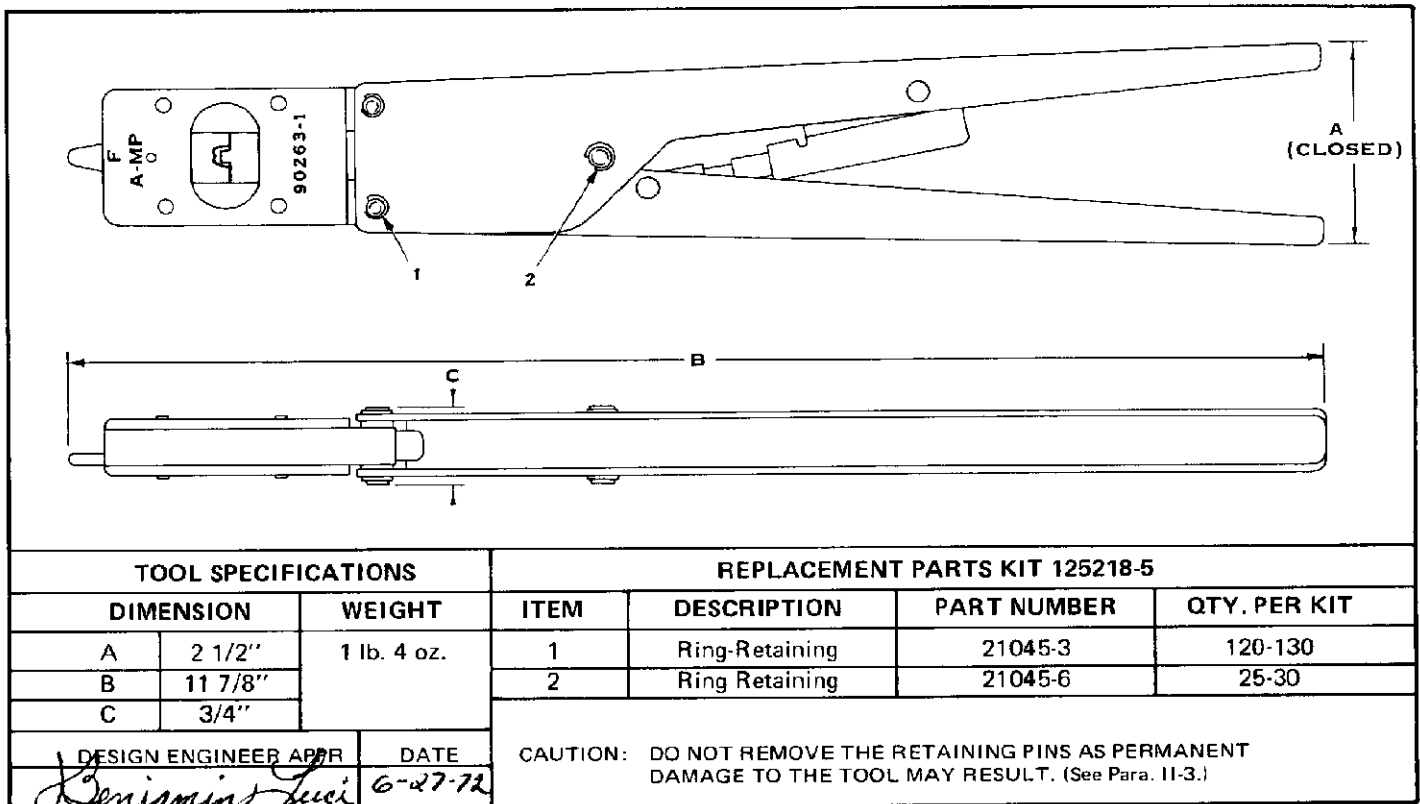


FIGURE II-1

SECTION II MAINTENANCE PROCEDURES

NOTE

Section I of this Instruction Sheet covers the contacts and application procedures recommended for the A-MP Hand Tool 90263-1.

II-1 TOOL CERTIFICATION

These instructions have been approved by AMP Design, Production and Quality Control Engineers to provide you with documented maintenance and inspection procedures in accordance with AMP Corporate Policy Number 3-3. We have, through our test laboratories and inspection of production assembly, established the procedures described herein to assure quality and reliability of A-MP Hand Crimping Tools.

The parts listed in Figure II-1 are customer replaceable parts. A complete inventory should be stocked and controlled to prevent lost time when replacement of parts is deemed necessary. When ordering, order the replacement parts kit listed in Figure II-1.

II-2.INSPECTION PROCEDURES

A. Daily Maintenance

The importance of daily maintenance cannot be over emphasized, as this can easily and efficiently be performed after each shift, ensuring satisfactory performance and continuous production. We recommend the following:

1. Remove dust, moisture and other contaminants with a clean brush or soft lint-free cloth. Do not use objects that could damage the tool.
2. Make sure the proper retaining pins are in place and secured with the proper retaining rings.
3. Make certain all pins, pivot points and bearing surfaces are protected with a THIN coat of oil. If necessary, oil with any good S.A.E. No. 20 Motor Oil. DO NOT OIL EXCESSIVELY.
4. When the tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies and store the tool in a clean, dry area.

B. Periodic Inspection

Regular inspections should be performed and recorded by your Quality Control Department with a record of scheduled inspections remaining with the tool or supplied to supervisory personnel responsible for the tool. We recommend at least one inspection a month, however, frequency of inspection will depend on the amount of use, ambient working conditions, operator training and skill and your own established standards. These inspections should be performed in the following sequence.

B-1. Visual Inspection

1. Remove all lubrication and accumulated film by immersing the tool (handles partially closed) in a suitable commercial de-greaser that will not effect paint or plastic material.
2. Make certain all retaining pins are in place and secured with retaining rings. Refer to parts listed in Figure II-1 if replacements are necessary.
3. Close the tool handles until the ratchet releases then allow handles to open freely. If they do not open quickly and fully the spring is defective and must be replaced. (See Paragraph II-3).
4. Inspect the head assembly: giving special attention to the dies for flattened, chipped, cracked, worn or broken areas. If damage to any part of the head assembly is evident, return the tool to AMP for evaluation and repair. (See Paragraph II-3)

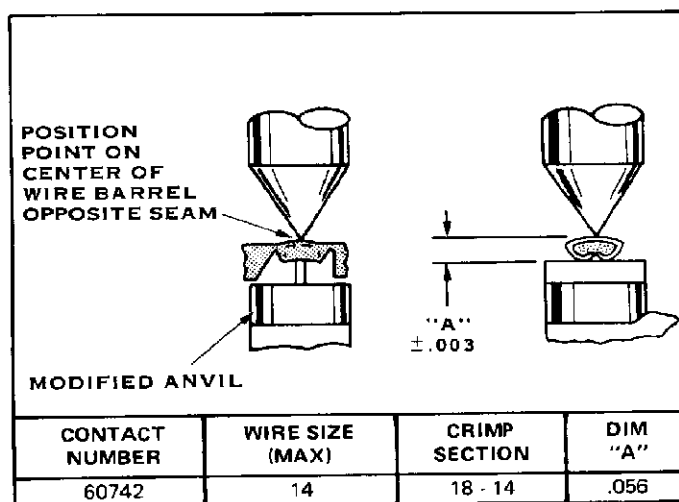


FIGURE II-2

Proceed as follows:

1. Determine the maximum wire size and the applicable contact for the tool. See Figure II-2.
2. Position the contact and wire between the crimping dies according to the Crimping Procedures described in Section I (steps 1 thru 6) . . . then holding the wire in place, squeeze the tool handles until you are certain the CERTI-CRIMP ratchet has released. *Now STOP and HOLD the tool handles in this position.* Maintain just enough tension on the tool handles to keep the dies closed.
3. Now check the clearance between the bottoming surfaces of the crimping dies. If the clearance is .001 or less the ratchet is satisfactory. If clearance exceeds .001 the ratchet is out of adjustment and must be repaired. (See Paragraph II-3).

If the tool conforms to these inspection procedures, lubricate it with a THIN coat of any good S.A.E. No. 20 Motor Oil and return it to service.

II-3.REPAIR

Parts other than those specified in Figure II-1 must be replaced by AMP to insure certification of the tool. When repair is necessary return the tool and a written description of the problem to:

AMP Incorporated
Customer Repair
1523 North 4th Street
Harrisburg, Pennsylvania 17105

or a wholly owned subsidiary of AMP Incorporated.

B-2. Crimp Height Inspection

This inspection incorporates the use of a micrometer with a modified anvil as shown in Figure II-2. AMP does not manufacture or market these gages. We recommend the Crimp Height Comparator RS-10195-L which can be purchased from:

VALCO
634 Stefco Boulevard
Bethlehem, Pennsylvania 18017

Proceed as follows:

1. Select one of each of the contacts and the maximum wire size for each from the chart in Figure II-2.
2. Refer to the Application Procedures in Section I and crimp the contacts accordingly.
3. Using a Crimp Height Comparator, measure each wire barrel crimp height as shown in Figure II-2. If the crimp height conforms to that shown in the chart the tool is considered dimensionally correct. If not, return the tool to AMP for evaluation and repair. (See Paragraph II-3).

B-3. CERTI-CRIMP Ratchet Inspection

First, obtain a .001" Shim that is suitable for checking the clearance between the bottoming surfaces of the crimping dies.