

HarnWare User Parts Library



Overview

Non-standard parts that you use regularly can be held in the HarnWare User Parts Library. The Library can be used for:

1) **Coded part numbers.** Coded part numbering schemes are used for most TE Connectivity products and military connectors. In such schemes different characters in the part number are used to describe various aspects of the part, such as dimensions, materials and finishes. The number of individual part numbers that can be generated by such schemes is often very large. The User Parts Library provides a means of handling such part numbering schemes in a way that avoids the need to add all the individual part numbers into the database.

2) **Sequential or non-coded part numbers.** The User Parts Library also allows individual part numbers to be stored in the database along with design parameters that describe each part. This allows the user to search for a part number by entering all or a selection of the required design parameters. For example, part style, size, material and finish.

3) **Limited coded part numbering schemes.** The approach used for sequential part numbers can also be used for coded part numbering schemes where only certain combinations of options are available and when it is feasible to enter the valid part numbers into the database.

The User Parts Library contains examples of all three styles of part numbering schemes:

		~ <i>2</i>					
Category: D	Connectors and Fi	ittings		-	Master:	SubAda	ptor 💌
Material	Finish		Style		Order Number		Entry Size
A	• A	•	00	-	09	-	04 💌
Braid Designator	Fastening Hardware		Modification Option	9			
A	•	-		•	1		
Part Numb	er: T×S55AA0005	304A				•	Constructed part number
Part Numb Tinel lock ada connectors	er: TXS55AA0009 Iptors for D-submir	304A nature				•	Constructed part number
Part Numb Tinel lock ada connectors	er: TXS55AA0003 aptors for D-submir	904A nature				Ţ	Constructed part number OK

TXS D-subminature connector adaptors is an example of a coded part numbering scheme.



Category:	Connectors and Fit	tings	Master: AM	PLIMITE	-
Shell Size	Number of Contacts	Mounting	Contacts	Shell Material	
1	▼ 15	 Standard 	▼ Crimp	▼ Steel	-
Density	Contact Size	Length	Width		
High	• 22	-	•	-	
Part Numb	per. 204500-1			▲ matching p numbers	art
Part Numb Subminiature Ser MIL-C-24	er: 204500-1 D Pin and Socket (308 (AMPLIMITE) Military Subminiatur	Connectors		4 matching p numbers	art
Part Numb Subminiature Ser MIL-C-24 AMPLIMITE Connectors a Jonnectors e Jensity pack.	Der: 204500-1 D Pin and Socket (308 (AMPLIMITE) Military Subminiatur re compact pin and specially designed 1 ages. They are idea	Connectors		4 matching p numbers	art

Amplimite D Subminiature Connectors is an example of sequentially numbered.

🖟 User P	art Libra	ary			
Category: Bon	ding Leads	•	Master:	nding Leads 004 🛛 💌]
Product Standard	Plating Code	Cross-Sectional Area mm²	Length (mm)	Terminal/Stud Code	
004	▼ T	• 1.4	63	• A •]
Part Number	: CFBA4199-00	14-T-1.4-63-A		1 matching part numbers	1
specifically for A applications. TH AECMA) approvextensive mech including flex te	Verospace and I ney are ASD* (fo ved and have u anical and elec sting to 250,000	Military ormerly ndergone trical testing,		ОК	
sinusoidal and r	andom vibration	ducts/METAL	No.	Cancel	1

Cabletec Bonding Leads is an example of a limited coded part numbering scheme where only certain permutations of part number options are valid

Using the Library

The HarnWare User Parts Library form is accessed via the command button in the User Balloon form. To construct a part number or to search for a part, select the part category and the master from those listed in the two combo-boxes. As each master is selected, descriptions, images and hyperlinks to documents containing further information will appear in the form if these have been defined in the User Parts Library database. The form can be enlarged to provide more space for viewing this extra information.

As each master is selected in the combo-box the parameters used to describe the part are loaded into combo-boxes. As each combo-box or individual parameter is selected a description, image and hyperlink information maybe displayed in the form. The master, parameter or part number to which the information relates is indicated by the label shown in bold. The hyperlink may reference a file on your local hard disc, a network drive or an internet web site.

If individual part numbers for the master are contained in the database, the number matching the selected parameters will be displayed and they will be listed in the part number combo-box. Each of the parameter combo-boxes include a blank at the top of the list so that a parameter can be ignored when searching. When an entry is selected in the part number combo-box the settings for all the parameters are selected in the parameter combo-boxes. A description, image and hyperlink may also be displayed for the individual part number if the database contains such references.

The user balloon form is accessed by opening a balloon shape in the Visio drawing or the Design Wizard or via the HarnWare Window>Parts menu. A command button in this form gives access to the HarnWare User Parts Library form



The Clear All command button selects blanks for all the parameters. This can provide a more useful starting point for a search than the defaults that are initially selected.

Where individual part numbers are not contained in the database, the parameter combo-boxes are used to construct a part number. As each option is selected the part number is updated to reflect the chosen options. In addition to the listed values you may also enter other values or edit the constructed part number. Obviously you need to ensure the options selected and any non-standard text entered form a valid combination and, therefore, a meaningful part number.

Clicking the OK command button causes the part number to be copied into the HarnWare Balloon form. Any description, specification and remarks associated with the selected part master are also copied into the Balloon form. If data is subsequently saved to the balloon shape in the drawing, the part number parameter settings are also saved. These maybe viewed in the Design Wizard and they are also used to select the default part number parameters if the User Parts Library form is opened again for that Balloon shape.

Clicking the Cancel command button simply unloads the User Part Library form without saving any data.

Database Structure

A copy of Microsoft Access 97, or later, is all that is required if you wish to add part numbers and part numbering schemes into the User Parts Library.

The database is held in the User Parts Library folder under the C:\Documents and Settings\User Name\Application Data\Tyco Electronics\HarnWare. Where <User Name> is the local user name. This folder can also be used for any image files and documents you wish to reference or hyperlink to, although the files can be on any other disc drive or Internet web site.

🕮 User Parts Database	: Database	
🛄 Tables 🛛 🖽 Queries 📄 🖽	Forms 📔 Reports 🛛 🖾 Macros 🖌 🗸	Modules
Masters PartNumberFieldOptions PartNumberFields SpecificPartNumbers		Open Design New

On opening the database in Microsoft Access you will see that it comprises four tables:



TE Connectivity

The following is an example of entering a coded part numbering scheme into the User Parts database using the EN4199-004 Bonding Leads datasheet shown below.

		100
		and the second s
net apacifically to. They are		Contraction of the local division of the loc
d have electrical	-	
a and salt	19 ×	
	and they	100
pie in.		10 Carent
election.	-	1 the second
· ASD' approved		and the second
* Tin & nickel pla + .65 °C to +260 °C	nad copper	AND A CONTRACTOR
- Terminal/Stud	estion range	
2		EN4199-004 Bonding Lead
of Logic show added to be a		
***	×	
	Î.	
		ernsisel/dised unde ne tables overlaaf
		angth (men) to tables contained
L		Arrant', 2.Brannt', 4.Brannt', 7.Brannt', 12.Grannt
	,	Walling code
		- Tin I - Nickel
		rodect elsedend
been fully tested to t	the following is	accordance with EN4 199-001:
And the first		
Contraction (Contraction) in		
the		
the Andulative arcone	elfonal area (ince)	
ths Ambibility for arms as 3.2mm ² 4.2mm ²	citoral creations"	13.tos/
ths Andaldity for a cases 10mm ² 60mm ²	citoral ana inn'	13.6997
ths Andukility br e on so 3.0mm' 4.0mm' 		
ths And shift be a costs 3.3mm ² 4.5mm ² 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.		
ths Antidity by a case 3.0mm ² 4.0m ² 4.1 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4		
ths Antiffly br e case 3.0ms ² 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.		
ths Anddiffy br case <u>1.5557</u> <u>4.5557</u> <u>4.557</u> <u>4.577</u> <u>4.577</u> <u>4.5777</u> <u>4.57777</u> <u>4.5777777777777777777777777777777777777</u>		
Amble Amble <th< td=""><td>Acadedda</td><td></td></th<>	Acadedda	
Good 2 Classical 0	And some intervention in the second s	The cross sectional area (sect)
ths AndiABI: br e areas 3.5ms ² 4.5ms ² 4.5m	Analisti Analisti Analisti Analisti Analisti Analisti Analisti Analisti Analisti Analisti Analisti Analisti Analisti	
ths Andidity by 2 cause 1.5ms ² 4.5ms ² 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Acad Mass 3.000000000000000000000000000000000000	
ths Andiofility for a cause 1.5mm ² 4.5mm ² 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 3.5mm ² 4.5mm ² 2. 2. 2. 2. 2. 2. 3.5mm ² 4.5mm ² 3.5mm ² 4.5mm ² 4.5mm ²	elland irea irea - 1.000 - 1.0000 - 1.000 - 1.000 1.000 - 1.000 - 1.0000 - 1.0000 - 1.000 - 1.000 - 1.000 - 1.000	
ths Andisitiv br c as set 1.50 m² 4.50 m² 2. 3. 2. 2. 4. 2. 2. 5. 2. 2. 4. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2.	And and any long Tang T	13.50007 - -
Good 2 Canney 2 2 3 3 4 150 4 150 4 40 4 10 4 40 4 40 4 40 4 40 4 40 40		
End Constraint 1.50m² 4.50m² 1.50m² 4.50m² 2 2 3 2.50 46 4.12 48 4.12 48 4.12 49 4.12 41 4.22 21 4.22 21 4.23 21 4.2		1 13.5007' - -
End Construction 1.50m² 4.50m² 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 2. 3.00120000000000000000000000000000000000		
End Construction 1.000* 4.000* 2.000* 4.000* 2.000* 4.000* 2.100* 4.000* 2.100* 4.000* 2.100* 4.000* 2.100* 4.000* 2.100* 4.000* 2.100* 4.000* 2.100* 4.000* 2.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* 4.000* 4.100* <td></td> <td></td>		
ths Andiafility by cases 1.0m ² 4.0m ² 2. 2. 2. 2.		
ths Andiality for a case 3.5ms ² 4.5ms ² 5.5ms ²		
	ASDraft from the line of the l	A start and then the interior of the second second second - A SD* approved - Too 5 micked platent second - SC - C C C C - Terminal' Studie options range - E coefficient flat likeling - SC -



TE Connectivity



For the following example the part to be added has 5 Part Number Fields

1) **Masters** This table contains records for each different part numbering scheme, or master. The master name is used to relate the records in all four tables and should, therefore, be carefully chosen to be meaningful and unique. As you click on each field in this and the other tables, a brief description of the field is output in the Microsoft Access status bar. PartsListCode controls where the part appears in parts lists. See 'Part Codes for Parts Listing' in the HarnWare help system for details. The parts list description and Spec/Remarks are the texts copied into the HarnWare Balloon form for saving into the balloon shape and that are extracted by the Parts Lister.

Open the default Masters Table





Add text for new Category, Master and Description Note: The Master column text must not be duplicated in other rows

۹	Microsoft Acces	ss - [Masters : T	able]				
	Eile Edit View Inser	rt F <u>o</u> rmat <u>R</u> ecords <u>T</u> oc	ols <u>W</u> indow <u>H</u> elp				
	L • 🖬 🖨 🖪 🖤 🕺 🖻	n 🖻 🚿 🗠 🍓 😤 🛃 🖁	↓ ⅔ ☜ ♡ ₩ ▶ ₩ 🛱 ⁄@ - ?)				
	Category	Master	Description				
	D Connectors and Fitti	AMPLIMITE	Subminiature D Pin and Socket Connectors p h				
	Grommet	Connector Code	Search for grommets by Tyco connector code				
	Grommet	Connector Part Number	er Search for grommets by connector part numb				
	D Connectors and Fitti	DSubAdaptor	Tinel lock adaptors for D-subminature connec				
•	Bonding Leads	Bonding Leads 004	EN4199-004 bonding leads are designed spec				
*							
1							
	\mathbf{i}						

Add link to any Documents, add file name for Picture, use drop down menu for Parts List Code, Add text for Parts List Description, add text for Parts List Spec/Remarks.

₽ ⁄a • 2				
Document	Picture	PartsListCode	PartsListDescription	PartsListSpec/Remar
http://catalog.tycoelectror	e4gi001.gif	Con	D-Sub Connector	Tyco AMP
	grommet.jpg	Con	Grommet	AB
	grommet.jpg	Con	Grommet	AB
		Ada	Adaptor	Raychem
http://www.cabletec.com/	EN4199-Me	Mis 🔹	Bonding Lead	Cabletec
4	5	Asy EPD Pwr Cox Wir Fil Bra ▼	7	8

Refer to Page 8 for balloon references







2) **PartNumberFields** This table contains records for each parameter used to construct the part number or to search for part numbers. The Prefix and Suffix fields are only used for constructing part numbers and are not required for masters that have part numbers stored in the Specific Part Numbers table. The Units and Tolerance fields are only relevant to numeric parameters for masters with records in the Specific Part Numbers table.

t Format <u>R</u> ecords <u>T</u> o	ols <u>W</u> indow <u>H</u> elp		
A			
🖷 🔊 👘 👘 🔁 🕇 🖉	*† ¥ 🔁 🗛 🕨	* 🕅 🛱 🕯 •	2
eldInde FieldName	Title1	Title2	Prefix
1 ProdStd	Product	Standard	CFBA4199-
2 Plating	Plating	Code	-
3 CrossSect	Cross-Sectional	Area mm ²	¥
4 Length	Length	(mm)	\sim
5 Terminal	Terminal/ C	Code	
	Idlnde FieldName 1 ProdStd 2 Plating 3 CrossSect 4 Length 5 Terminal	Idlnde FieldName Title1 1 ProdStd Product 2 Plating Plating 3 CrossSect Cross-Sectional 4 Length Length C 5 Terminal Terminal/ C	Idlnde FieldName Title1 Title2 1 ProdStd Product Standard 2 Plating Code Code 3 CrossSect Cross-Sectional Area mm² 4 Length Length (mm) 5 Terminal Terminal Code





3) **PartNumberFieldOptions** This table contains records for each value of each parameter or the default value for a parameter with a ValueList in the Part Number Fields table.

For this example from the datasheet





🔍 Micros	soft Acc	ess - [Parti	Numbe	erField	Options	: Table]	
Eile Eo	dit <u>V</u> iew <u>I</u> n	isert F <u>o</u> rmat <u>R</u> ei	cords <u>T</u> a	ols <u>W</u> inc	ow <u>H</u> elp		
× - = 4	B 🖪 🖤 🐰	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	😤 ĝi	XI 39 7	7 4 +* 1%	(🗗 ⁄a • 🛛	
M	aster	FieldName	Sort	Value	Default	Description	
ding	Leads 004	CrossSect	/ 1	1.4		Available Cross-Sectional Area	
ssect ding	Leads 004	CrossSect	5	13.0		Available Cross-Sectional Area	
tx5 ding	Leads 004	CrossSect	2	3.5		Available Cross-Sectional Area	
tions ding	Leads 004	CrossSect	3	4.5		Available Cross-Sectional Area	
Bonding	Leads 004	CrossSect	4	7.0		Available Cross-Sectional Area	
Bonding	Leads 004	Length	3	100		Standard Available Lengths (mm	1)
Bonding	Leads 004	Length	4	125		Standard Available Lengths (mm	1)
Bonding	Leads 004	Length	5	160		Standard Available Lengths (mm	1)
ding	Leads 004	Length	6	200		Standard Available Lengths (mm	1)
ding	Leads 004	Length	7	250		Standard Available Lengths (mm	1)
K 12 ding	Leads 004	Length	8	315		Standard Available Lengths (mm	1)
ons _{ding}	Leads 004	Length	9	400		Standard Available Lengths (mm	1)
Bonding	Leads 004	Length	10	500		Standard Available Lengths (mm	1)
Bonding	Leads 004	Length	1	63		Standard Available Lengths (mm	1)
Bonding	Leads 004	Length	11	630		Standard Available Lengths (mm	1)
Bonding	Leads 004	Length	2	80		Standard Available Lengths mm	1)
nal ding	Leads 004	Length	12	800		Standard Available Lengths (min	U I
12 ding	Leads 004	Plating	2	N		Nickel Plated Copper -65°C to +	280°C
ding	Leads 004	Plating	<u> </u>	Т	V	Tin Plated Copper -65°C to +15	0°C
ding	Leads 004	Terminal	/ 1	A		Terminal Code	
Bonding	Leads 004	Terminal	2	В		Terminal Code	`
Bonding	Leads 004	Terminal	3	С		Terminal Code	
Bonding	Leads 004	Terminal	4	D		Terminal Code	Desc
nal ding	Leads 004	Terminal	5	E		Terminal Code	each
13 ding	Leads 004	Terminal	6	F		Terminal Code	
ding	Leads 004	Terminal	7	G		Terminal Code	
Donding	Leads 004	Terminal	8	Н		Terminal Code	
Bonding	Leads 004	Terminal	9	J		Terminal Code	
Bonding	Leads 004	Terminal	10	K		Terminal Code	
Bonding	Leads 004	Terminal	11	L		Terminal Code	
Bonding	Leads 004	Terminal	12	M		Terminal Code	
Bonding	Leads 004	Terminal	13	N		Terminal Code	





4) SpecificPartNumbers This table contains a record for each part number along with values for each parameter used to describe the part. The parameters are held in the Field 1 to 15 which relates to the Field Index values in the Part Number Fields table.

When adding data to the User Parts Library database it is important to ensure data is entered consistently and accurately. For example, master names must match in the four tables and FieldNames must match in the Part Number Fields and Part Number Field Options table.

Although non-standard parts are normally represented by a balloon shape in the drawing, any shape can be used provided the basic structure matches that of a standard HarnWare balloon shape. In particular the data1 field, custom properties and sub-shape with the data1 field setting for the item number.

• 🖬 🛎 🖉 🗸	× & • • • • • • •	8 2.	X+ ¥	A V	#9 > *	× 🗇 🕾	- 2J		1
Master	PartNumber	Field	Field2	Field3	Field	Field Field	Field Field1 Fi	eld1 Field1	Description
Bonding Leads 004	CFBA4199-004-N-1.4-100-A	004	N	1.4	100	A			EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads 004	CFBA4199-004-N-1.4-100-B	004	N	1.4	100	B		_	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads 004	CFBA4199-004-N-1.4-100-C	004	N	1.4	100	C			EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-D	004	N	1.4	100	D			EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-E	004	N	1.4	100	E		_	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-F	004	N	1.4	100	F		_	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads 004	CFBA4199-004-N-1.4-100-G	004	N	1.4	100	G		-	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-H	004	N	1.4	100	н		-	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-J	004	N	1.4	100	J			EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-K	004	N	1.4	100	K		_	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-100-L	004	N	1.4	100	L		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads UU4	CFBA4199-004-N-1.4-100-M	004	N	1.4	100	M			EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads 004	CFBA4199-004-N-1.4-125-A	004	N	1.4	125	A		_	EN4199-004 Bonding lead, Nickel Plated (
Sonding Leads UU4	CFBA4199-004-N-1.4-125-B	004	N	1.4	125	B		_	EN4199-004 Bonding lead, Nickel Plated C
Sonding Leads UU4	CFBA4199-004-N-1.4-125-C	004	N	1.4	125	C		-	EN4199-004 Bonding lead, Nickel Plated
onding Leads 004	CFBA4199-004-N-1.4-125-D	004	N	1.4	125	D		-	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads UU4	CFBA4199-004-N-1.4-125-E	004	N	1.4	125	E		-	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads UU4	CFBA4199-004-N-1.4-125-F	004	N	1.4	125	F		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-125-G	004	N	1.4	125	G		_	EN4199-004 Bonding lead, Nickel Plated
londing Leads 004	CFBA4199-004-N-1.4-125-H	004	N	1.4	125	н		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-125-J	004	N	1.4	125	J		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-125-K	004	N	1.4	125	K		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-125-L	004	N	1.4	125	L		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-125-M	004	N	1.4	125	M		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-160-A	004	N	1.4	160	A		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-160-B	004	N	1.4	160	В		-	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-160-C	004	N	1.4	160	C		_	EN4199-004 Bonding lead, Nickel Plated
Bonding Leads 004	CFBA419-004-N-1.4-160-D	004	N	1.4	160	D			EN4199-004 Bonding lead, Nickel Plated
Bonding Leads 004	CFBA412 004-N-1.4-160-E	004	N	1.4	160	E		_	EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4199-004-N-1.4-160-F	004	N	1.4	160	F			EN4199-004 Bonding lead, Nickel Plated
Sonding Leads 004	CFBA4198-004-N-1.4-160-G	004	N	1.4	160	G			EN4199-004 Bonding lead, Nickel Plated
londing Leads 004	CFBA4199-004-N-1.4-160-H	004	N	1.4	160	н			EN4199-004 Bonding lead, Nickel Plated
ord: 14	1 > > > of 1207	en an	•						•
match a name in the l	Masters table								
	State of the second								

In this example there are 760 lines to be entered. This table is only used for sequential part numbering and limited coded part numbering schemes. In cases where the SpecificPartNumbers table needs to be loaded with a large amount of data that follows a reasonably well defined logic, a small program will often be the much quicker and less error prone approach. A Visual Basic 6 program can be used to load the Cabletec Bonding Lead part numbers. This simple program will take an hour or so to write and test. A similar program could have been written in Visual Basic for Applications which is included in Microsoft Access and Visio. If you're not proficient in programming it is likely that someone in your company would be able to generate such programs for you or, if you prefer, we'd be happy to offer our help."



Disclaimer

All of the present information, including drawings, illustrations and graphic designs reflects our present understanding and is to the best of our knowledge and belief correct and reliable. Users, however, should independently evaluate the suitability of each product for the designed application. Under no circumstances does this constitute an assurance of any particular quality or performance. Such an assurance is only provided in the context of our product specifications or explicit contractual arrangements. Our liability for these products is set forth in our standard terms and conditions.

