

OPERATING INSTRUCTIONS E16A REV. 0

Variable Reluctance Speed Sensor

E16A

Product ID

GREEN LINE

INDUSTRIAL SPEED SENSORS

	Type # E16A	Product # 385Z-05575	Drawing # 114.454 Rev.0		
General					
Function	The E16A series variables an inductive coil, and a sensor face changes the being induced in the coil speed of the moving tar gap, geometry of target load. VR sensors, also be require an external support.	permanent magnet. A for e magnetic field strength I. The frequency of the get. The amplitude of the magnetic properties of known as passive or electron	errous pole wheel par n, resulting in an AC output signal is propo le signal depends on target material, and	ssing the voltage ortional to the speed, air the electrica	
Technical data					
Coil properties	Inductance @ 1 kHz: Resistance: 850 Ohn Magnet polarity: nort Pole piece: diameter	n ± 10% h pole towards front fac	е		
Polarity	Upon approach of ferror	us metal, the signal pin	is positive with respe	ct to GND.	
Signal output	The signal frequency is proportional to the target speed. The signal amplitude shown in the figure is valid for a load of 100 kOhm, and is affected by air gap, target geometry and material. It is also proportional to the linear speed of the teeth.				
	Typical output voltage (reference speed 10 m/s, 100 kOhm load)				
		1 1.5 2 Air gap (mm)	2.5 3 3.5	M = 0. M = 1. M = 2. M = 4.0	
Frequency range	Up to 20 kHz, lower limit depending on application				
Housing	M16x1.5, tightening torque: max. 35 Nm				
Connection	Connector: M12x1 thread, 4 pins, black				
Protection	Sensor head: IP68 Connector: IP67				
Insulation	Housing and electronics galvanically isolated (Test: 500 V, 50 Hz for 1 minute)				
Pole wheel	Prerequisite: Toothed wheel of a ferrous material (e.g. Steel 1.0036). Optimal performance with Involute gear Tooth width > 10 mm Side offset < 0.2 mm Eccentricity < 0.2 mm				
		-			



IN CHARGE OF SPEED

OPERATING INSTRUCTIONS E16A REV. 0

<u> </u>		
pole wheel	trigger level. See figure.	
Electromagnetic compatibility (EMC)	Please contact Jaquet for further details.	
Vibration & shock immunity	Jaquet Greenline sensors are approved for rough environments. Please contact Jaquet for further details.	
Operating temperature	-40°C125°C	
Further Information		
Safety	All mechanical installations must be carried out by an expert. General safety requirements have to be met.	
Installation	The sensor has to be aligned to the pole wheel according to the sensor drawing independent of its rotational orientation. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however be set to prevent the face of the sensor ever touching the pole wheel. A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions. A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses. The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions.	
Maintenance	Product cannot be repaired.	
Transport	Product must be handled with care to prevent damage of the front face.	
Storage	Product must be stored in dry conditions. The storage temperature corresponds to the operation temperature.	
Disposal	Product must be disposed of properly, it must not be disposed as domestic waste.	





OPERATING INSTRUCTIONS E16A REV. 0

