




**A-MP SHIELD & CABLE CLAMP
ASSEMBLIES
FOR 26 & 41 POSITION
SERIES "M" CONNECTORS**

IS 1192	
RELEASED	1-14-61
REVISED	12-31-63

**CONNECTOR PRODUCTS
DIVISION**

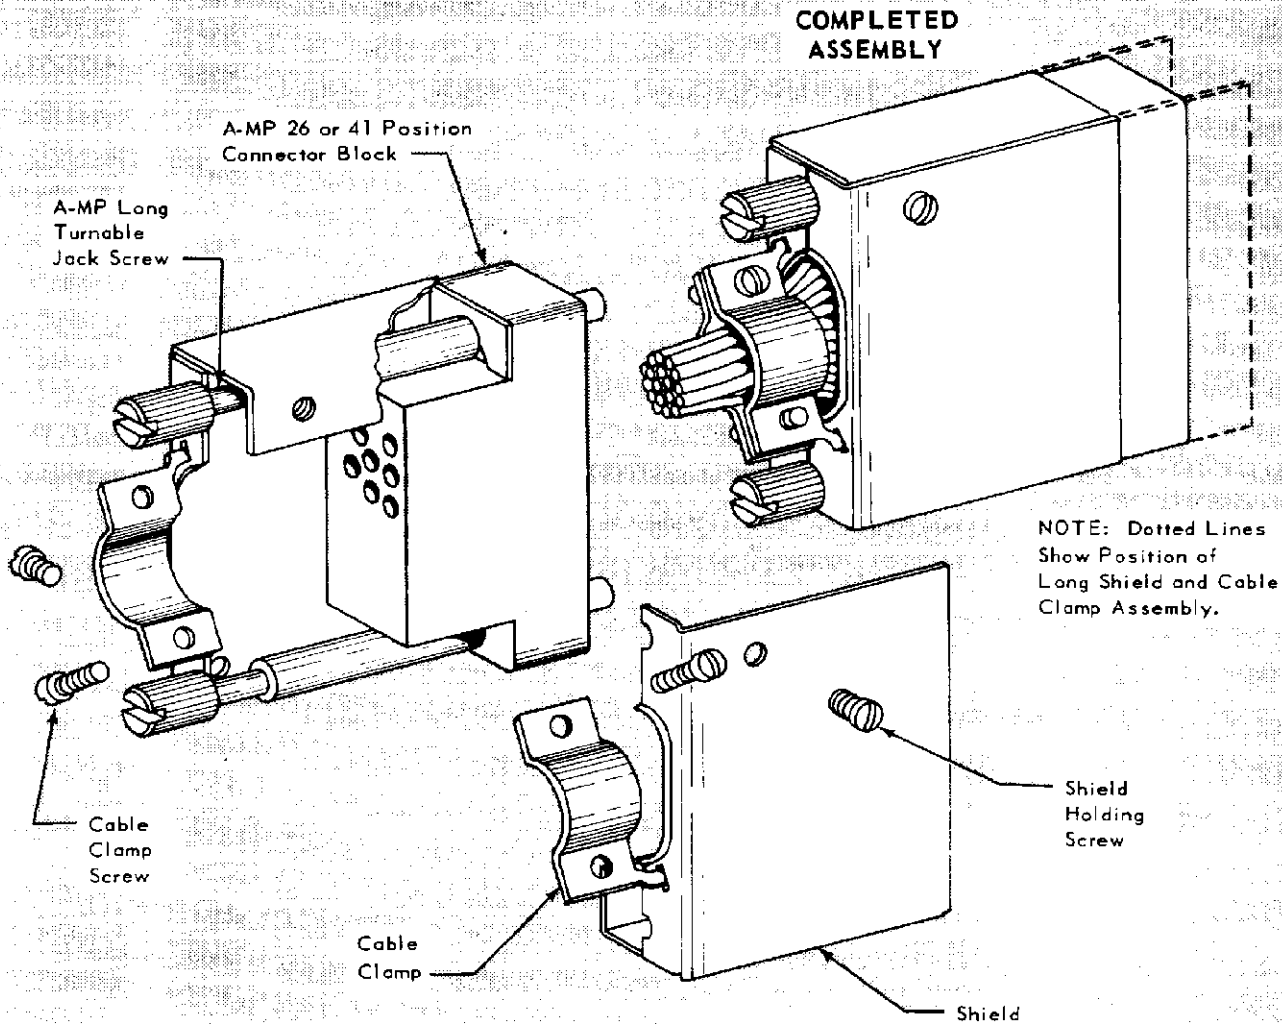

ASSEMBLY INSTRUCTIONS

1. Attach A-MP Jack Screws to Connector Block according to A-MP Instruction Sheet No. 1189.
2. Place one-half of the Shield Assembly on Male or Female Connector Block as shown.
3. Bundle Wire so that it fits into "Hollow" in Cable Clamp.
4. Place other half of Shield Assembly on Connector Block.
5. Attach two #4-40 Shield Holding Screws. Do not tighten.
6. Attach Cable Clamp Screws. Make sure that all Wire is fed through Cable Clamp.

7. Tighten all Screws.

ASSEMBLY NUMBER	DESCRIPTION	CLAMP CAPACITY
200514-□	26 Position Short Shield	26 Wires at .065
201576-□	26 Position Long Shield	26 Wires at .065
202160-□	41 Position Short Shield	41 Wires at .034
202164-□	41 Position Long Shield	41 Wires at .034
202383-1	41 Position Short Shield	41 Wires at .034
202383-2	41 Position Long Shield	41 Wires at .034

© Copyright 1961, 1963 by AMP Incorporated. All international rights reserved. A-MP (TM) U.S.A. and foreign. A-MP (TM) products covered by U.S. and foreign patents and/or patents pending.