



#### **NOTE**

All numerical values are in metric units [with U.S. customary units in brackets]. Dimensions are in millimeters [and inches]. Unless otherwise specified, dimensions have a tolerance of  $\pm 0.13$  [ $\pm .005$ ] and angles have a tolerance of  $\pm 2^{\circ}$ . Figures and illustrations are for identification only and are not drawn to scale.




#### NOTE

In the event that there are difference between the information presented in this application specification versus the information found in other instruction material, this application specification will take precedence.

# 1. INTRODUCTION


This specification covers the requirements for application of DEUTSCH size 16 S&F pin and socket contacts. These contacts are used in any DEUTSCH connector having size 16 contact cavities. Each contact features a wire barrel, insulation barrel, retention shoulder, and mating end. The socket features a protective sleeve. In use, the retention shoulder holds the contact in the connector. The contacts are available in loose-piece and strip-fed form for terminating using a hand tool or automatic machine.

When corresponding with personnel, use the terminology provided in this specification to facilitate inquiries for information. Basic terms and features of this product are provided in Figure 1.

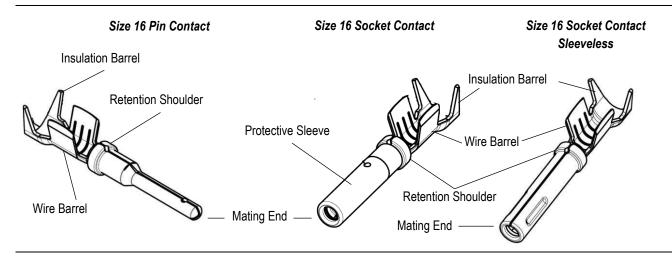

Size 16 Pin Reel Payoff

Size 16 Socket Reel Payoff

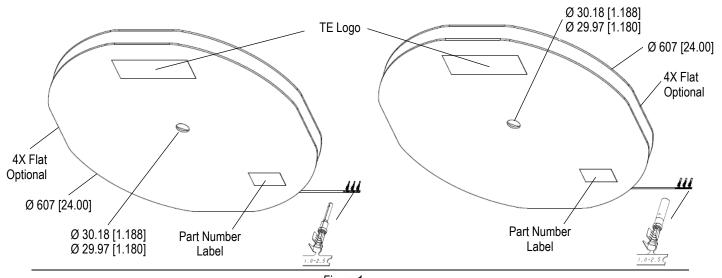



### 2. REFERENCE MATERIAL

## 2.1. Revision Summary

See Section 8

### 2.2. Customer Assistance

Product Base Part Numbers (listed below) and Product Code J836 are representative of DEUTSCH size 16 S&F pin and socket contacts. Use of these numbers will identify the product line and help you to obtain product and tooling information. Such information can be obtained by visiting our website at <a href="https://www.te.com">www.te.com</a> or calling the number at the bottom of this page.

Pin: 1060-16-12

Socket: 1062-16-12 1062-16-14

# 2.3. Drawings

Customer drawings for product part numbers are available from www.te.com. The information contained in the customer drawings takes priority.

#### 2.4. Instructional Material

Instructional material that pertains to this product are:

402-1002	Interpretation of Cross-Sections for F-Crimp
408-3295	Preparing Reel of Contacts for Application Tooling
408-7424	Checking Terminal Crimp Height and Gaging the Die Closure
408-8059	Suggested Preventative Maintenance Schedule for Applicators
408-9816	Handling of Reeled Product
408-10389	Ocean Side-Feed Applicators
408-151007	DEUTSCH Extraction Tools for Rear-Release Connectors
408-151008	DEUTSCH Removal Tool DT-RT1 for Front-Release Connectors
409-5128	Basic AMP-O-LECTRIC* Model "K" Terminating Machines 471273-[]
409-5207	Model "T" Terminating Units 694620-[]
409-5289	Model "T" Terminating Unit 458000-4
409-5842	AMP-O-LECTRIC Model "G" Terminating Machines 354500-[]
409-10047	AMP 3K* Terminating Machines 1725950-[] and AMP 5K* Terminating Machines 1725900-[]
409-10099	AMP 3K/40* Terminating Machines 2116983-[] and AMP 5K/40* Terminating Machines 2116984-[]
114-18022-1	0 Making and Evaluation of Cross Sections for F-Crimp Termination
0425-040-00	OO Applicator DCT16-02-01
0425-058-00	00 Hand Crimping Tool DTT-16-02
0425-077-00	00 Hand Crimping Tool DTT-16-03

# 2.5. Global Standards and Publications

DIN 72551-6, "Road Vehicles—Low-Tension Cables—Part 6: Single-Core, Unscreened with Thin Insulation Wall; Dimensions, Materials, Marking"

ISO 6722, "Road Vehicles—60 V and 600 V Single-Core Cables—Dimensions, Test Methods, and Requirements"

SAE J1128, "Low Voltage Primary Cable"

Rev F 2 of 12



#### 3. REQUIREMENTS

## 3.1. Storage

# A. Ultraviolet Light

Prolonged exposure to ultraviolet light may deteriorate the chemical composition used in the product material.

### B. Shelf Life

The product should remain in the shipping containers until ready for use to prevent deformation to components. The product should be used on a first in, first out basis to avoid storage contamination that could adversely affect performance.

### C. Reeled Contacts

When using reeled contacts, store coil wound reels horizontally and traverse wound reels vertically.

### D. Chemical Exposure

Do not store product near any chemical listed below as they may cause stress corrosion cracking in the material.

Alkalies	Ammonia	Citrates	Phosphates Citrates	Sulfur Compounds
Amines	Carbonates	Nitrites	Sulfur Nitrites	Tartrates

# 3.2. Operating Temperature

These contacts are designed to operate in a temperature range of -55 to 125°C [-67 to 257°F].

# 3.3. Material

The contacts are made of copper alloy. Plating material is provided on the contact-specific customer drawing.

# 3.4. Wire Size and Preparation

The contacts accept stranded wire sizes and insulation diameters using wire standards in Section 2.5. For insulation diameter per contact, refer to the customer drawing for the contact. The wire must be stripped within the dimensions given in Figure 1. Special wire type which may require special applicator tooling settings, crimp requirements are not covered in this specification.



#### CALITION

The wire conductors and insulation must not be nicked, scrapped, broken, or cut during the stripping operation.

WIRE SIZE	INSULATION DIAMETER RANGE	
1.00-2.50 mm <sup>2</sup> , 16-12 AWG	1.90-3.55 [.075140]	3.81-5.08 [.150200] Note: Not to Scale

Figure 1

Rev F 3 of 12



# 3.5. Crimp

The contact must be crimped to the wire according to instructions packaged with the tooling. These requirements apply equally to the pin contact and the socket contact. It is essential to have the applicator feeding mechanism adjusted correctly to ensure the contact is positioned centered on the crimp anvil. Refer to the applicator instruction sheet for adjustment instructions.

### A. Cutoff Tab

The cutoff tab is considered the remaining portion of the carrier strip after the contact is cut from the strip. The cutoff tab must not exceed the dimension given in Figure 3.

#### B. Wire Barrel Seam

The wire barrel crimp must form a closed seam over the entire length of the wire barrel. Refer to Figure 3.

# C. Wire Barrel Crimp

The crimp applied to the wire barrel portion of the contact must be the most compressed area. All conductors within the wire barrel crimp must show evidence of compression. Good compression is guaranteed by following the given crimp dimensions, Figure 3. The crimp barrel is filled with the conductor strands. All conductor strands within the wire crimp must show evidence of compression. Voids due to unequal roll-in of the crimp barrel legs, uneven distribution of strands or unfavorable tolerance set of wire cross section area, crimp height and material thickness, are permissible. The crimped area must be symmetrical on both sides of the wire barrel. The thickness of the wall must be uniform. See 114-18022-10 for more information how to make and evaluate F-crimp cross sections.

The crimp barrel inside wall is formed to the shape of the strands for an intimate contact. All existing wire strands are enclosed within the wire barrel. Any stranding outside the crimp barrel or broken strands outside the wire crimp are not permissible.

If low compression occurs, the number of strands has to be checked. To avoid over compression, which would favor wire barrel flash, the wire crimp height may not be beyond the limitation.

All conductors must be centered within and held firmly inside the wire barrel. No strands can be folded back over the wire insulation. There must be no evidence of loose wire strands or wire strands visible in the seam. The wire insulation must not enter the contact wire barrel. Refer to Figure 3.

For wire sizes equal to or less than 16 AWG, the crimp is acceptable when each tip of the wire barrel wraps inward to form a curl that touches the inside of the wire barrel. See Figure 3

The wire barrel crimp height and width must be within the dimensions provided in Figure 3.

#### D. Insulation Barrel Crimp


The insulation barrel shall not have burrs. The insulation barrel crimp shall grip the wire insulation firmly. The insulation barrel crimp (including the cutoff tab) must be equal to or less than the wire insulation outside diameter.

The wire stripping tool may leave corrugated indentations on the surface of the wire insulation. This is especially severe with cross-linked polyethylene (high-temperature) wire insulation. If the wire is positioned with these indentations at the connector wire seal, leakage may result. The wire insulation surface must be smooth and free of indentations within the area described in Figure 3.

There may be a slight deformation of the wire insulation. There may be skewing of the wire insulation.

Rev F 4 of 12




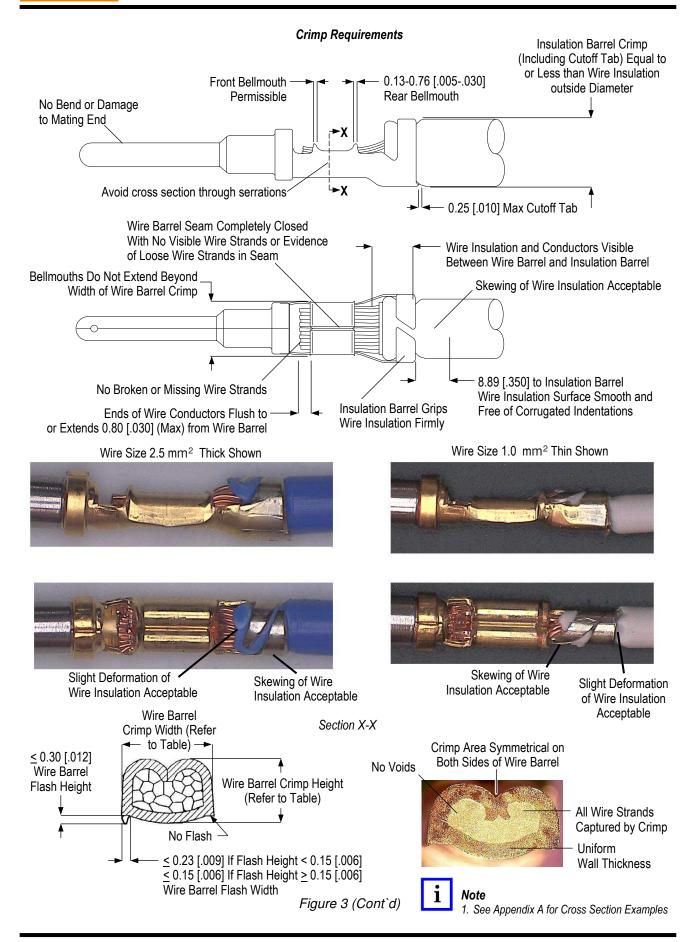


Rev F 5 of 12



# Section X-X for Wire Size ≤ 16 AWG

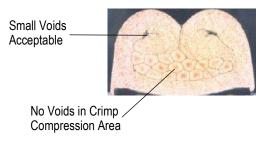



Tips Wrap Inward and Touch Inside of Wire Barrel (All Other Requirements Apply)

# **Unacceptable Wire Barrel Crimp**



Uneven Crimp and Wall Thickness and Flash on Both Sides



Uneven Crimp and Wall Thickness



Crimp Too Loose and Void on Both Sides

Contact	Mina Cina	Wire Insulation	Contact Wire Barrel			
1060 (Pin); 1062 (Socket)	Wire Size	Diameter Range	Crimp Height	Crimp Width		
	12 AWG	1.90-3.55 [.075140]	1.73-1.81 [.068071]	2.74-2.92 [.108115]		
	2.50 mm <sup>2</sup>		1.68-1.76 [.066069]	2.69-2.85 [.106112]		
1060-16-12	14 AWG		1.60-1.68 [.063066]			
1062-16-12	2.0 mm <sup>2</sup>		1.58-1.66 [.062065]	2.66-2.82 [.105-111]		
1062-16-14	1.50 mm²		1.45-1.53 [.057060]	_		
	16 AWG		1.42-1.50 [.056059]	2.64-2.80 [.104110]		
	1.00 mm²		1.35-1.43 [.053056]	2.61-2.77 [.103109]		

Figure 3 (End)

# E. Bellmouths

A front bellmouth is permissible. The rear bellmouth shall conform to the dimensions given in Figure 3.

# F. Wire Conductor and Insulation Location

The wire conductor and insulation must be visible between the contact wire barrel and insulation barrel. Conductor ends must be flush with or extend beyond the end of the wire barrel to the dimension given in Figure 3.

### G. Wire Barrel Flash

Wire barrel flash is the formation that may appear on one side of the wire barrel as the result of the crimping process. It must not exceed the dimension provided in Figure 3

There must be no cracking at the bottom of the wire barrel—independent of the size of the flash.

Rev F 6 of 12



# H. Mating End

The mating end of the contact must not be bent or damaged in any way. See Figure 3.

### I. Bend Allowance

The force applied during crimping may cause some bending between the crimped wire barrel and the mating portion of the contact. Such deformation is acceptable within the limits provided in Figure 4.

The up-and-down bend of the crimped portion of the contact, including the cutoff tab and burr, and the side-to-side bend of the crimped contact must not be bent beyond the limits given.



#### IOTE

- 1. Periodic inspections must be made to ensure crimped contact formation is consistent.
- 2. Periodic inspection of applicator tooling must be made to ensure parts are tightened in the correct position.
- 3. Perform regular maintenance and tool wear inspection. See applicator instruction sheet for more information.

# **Up-and-Down Bend Allowance**

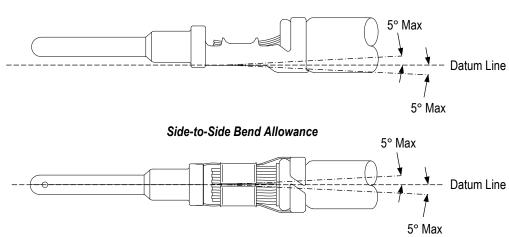


Figure 4

# J. Crimp Station Lube

Pre-lube the contacts prior to crimping using Stoner Terminal Lubricant, Item #E807 along with TE Lubricator 2119955-X. See Figure 4.1.

(For the TE OCEAN Atlantic Version applicators, use part number 2119955-1.)

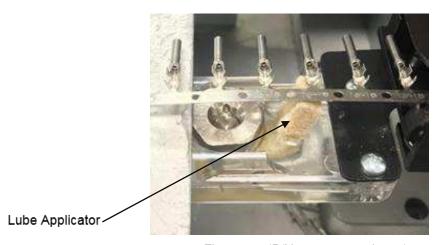


Figure 4.1 (P/N 2119955-1 shown)

Rev F 7 of 12



## 3.6. Processing

Care must be taken when transporting, storing, or processing crimped contacts and wires that any damage or soiling of the contact body or crimped area is avoided. When processing the end of the wire or anywhere along the wire, damage or impairment of the crimped contact must be avoided.

For a twisting operation after crimping or inserting a contact to a connector, the twist must end at least 35 [1.38] away from the contact. Additional care must be taken during or after the twisting operation to avoid any pulling force to the contact or crimped area that may affect the function of the connector.

TE has not tested, nor otherwise verified, contact performance after processing of the connected wire by ultrasonic welding. TE does not make any representation or warranty, expressed or implied, and disclaims any and all liability, on any legal basis whatsoever, for contact performance after ultrasonic welding of the connected wire. Customer takes sole responsibility for the evaluation, application, and use of contacts in such circumstances.

## 3.7. Replacement and Repair

Damaged or worn contacts cannot be repaired. A contact can be replaced provided there is sufficient slack to insert the new contact into the connector. An extraction tool must be used to remove individual contacts from the connector.

# 4. QUALIFICATION

DEUTSCH size 16 S&F pin and socket contacts do not require agency approval.

### 5. TOOLING

Tooling part numbers and related instructional material are given in Figure 5.

#### 5.1. Hand Tools

The hand crimping tools consist of a handle assembly with integral fixed crimping dies. The dies have crimping chambers used to crimp the contact onto pre-stripped wire.

# 5.2. Applicators

The applicators are designed to crimp strip-fed contacts onto pre-stripped wire, and provides for high volume, heavy duty production requirements. These applicators accept interchangeable crimping dies and must be installed onto a power unit.

#### 5.3. Power Units

These power units provide the force required to drive applicators. They provide for high volume, heavy duty production requirements. All of the power units are stand-alone machines; except the basic AMP-O-LECTRIC Model "K", which is designed to be bench mounted.

#### 5.4. Extraction Tools and Removal Tool

The extraction tools and removal tool are designed to remove the contacts from the connectors by releasing the contact retention fingers from the housing without overstressing any part of the contact.

### 5.5. Crimping Dies

The dies are designed to be installed into an applicator. The dies form the crimp when crimping the contact.

### 5.6. Micrometer

A micrometer should be used to measure contact crimp height

Rev F 8 of 12





Ocean Side-Feed Applicators (408-10389)



**DEUTSCH Applicator** DCT16-02-01 (0425-040-0000)



Crimper (Refer to Table)

Crimping Dies (Illustrations are Representative)




Anvil (Refer to Table)




AMP 3K/40 Terminating Machines 2119683-[] or AMP 5K/40 Terminating Machines 2119684-[] (409-10099)



AMP 3K Terminating Machines 1725950-[] or AMP 5K Terminating Machines 1725900-[] (409-10047)



Basic AMP-O-LECTRIC Model "K" Terminating Machines 471273-[] (409-5128)

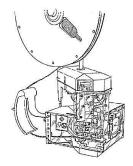


AMP-O-LECTRIC Model "G" **Terminating Machines** 354500-[] (409-5842)




Model "T" Terminating Units 694620-[] (409-5207) or 458000-4 (409-5289)



Hand Crimping Tool DTT-16-02 (0425-058-0000



Hand Crimping Tool DTT-16-03 (0425-077-0000)



Crimp Height Micrometer 675836 (408-7424)



**Extraction Tools** (408-151007)



Crimp Height Micrometer (With Peak) 547203-1 (408-7424)

Front-Release Connectors (408-151008)

Figure 5 (Cont`d)

Contact	DEUTSCH	
1060 (Pin); 1062 (Socket)	Hand Crimping Tool	
1060-16-12	DTT-16-00	
1062-16-12	DTT-16-03	
1062-16-14	D11-10-03	

9 of 12 Rev F




Contact 1060 (Pin); 1062 (Socket)	Wire Size mm² [AWG]	OCEAN Applicator	Insulation (Outside Diameter) Range	Wire Crimper Insulation Crimper		Anvil	
	1.0-2.5 [16-12]	2266112	3.15 - 3.56 [.124140]	4-1633713-2	1803019-3	1803293-8	
1060-16-12 1062-16-12		2266113	2.72 - 3.12 [.107123]		1803019-4	1803293-9	
1062-16-12		2266114	2.29 - 2.69 [.090106]		1803019-5	1-1803293-0	
		2266115	1.91 - 2.26 [.075089]		1803019-6	1-1803293-1	

Contact 1060 (Pin); 1062 (Socket)	Wire Size mm² [AWG]	DEUTSCH Applicator	Wire Punch Wire Anvil	Insulation (Outside Diameter) Range	Insulation Crimper	Insulation Anvil	
				3.15 - 3.55 [.124140] 1017-628-0200 1017-629			
1060-16-12 1062-16-12	1.0-2.5	DCT16-02-01	1017-622-0200	2.72 - 3.12 [.107123]	1017-540-0200	0 1017-541-0200	
1062-16-12	[16-12]	DC116-02-01	1017-623-0200	2.29 - 2.69 [.090106]	1017-626-0200 1017-627-	1017-627-0200	
				1.91 - 2.26 [.075089]	1017-624-0200	1017-625-0200	

Figure 5 (End)

# 6. APPENDIX A. CRIMP CROSS-SECTIONS

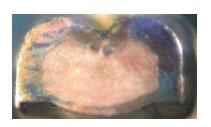

12 AWG 1060-16-12 / 1062-16-12 1062-16-14



14 AWG 1060-16-12 / 1062-16-12 1062-16-14



16 AWG 1060-16-12 / 1062-16-12 1062-16-14



2.50 mm<sup>2</sup> 1060-16-12 / 1062-16-12 1062-16-14



1.50 mm<sup>2</sup> 1060-16-12 / 1062-16-12 1062-16-14



1.00 mm<sup>2</sup> 1060-16-12 / 1062-16-12 1062-16-14

Rev F 10 of 12



### 7. VISUAL AID

The illustration below shows a typical application of DEUTSCH size 16 S&F pin and socket contacts. This Illustration should be used by production personnel to ensure a correctly applied product. Applications which DO NOT appear correct should be inspected using the information in the preceding pages of this specification And in the instructional material shipped with the product or tooling.

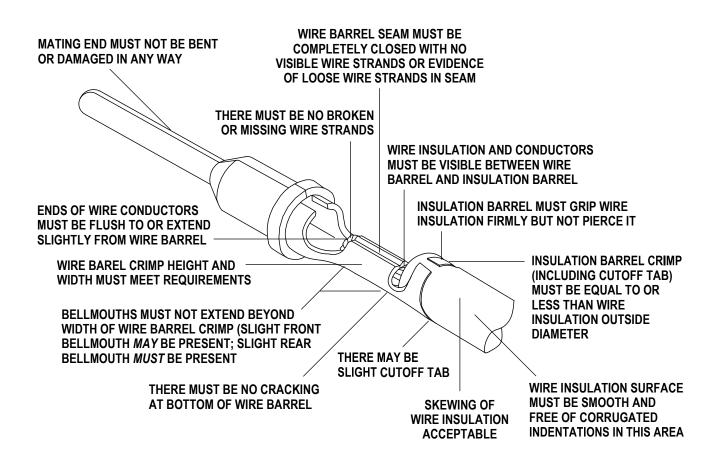


FIGURE 6

Rev F 11 of 12



# 8. REVISION HISTORY

Rev Ltr	Brief Description of Change	Date	Dwn	Apvd
A	Initial Release	10-Feb-17	PV	DM
В	Page 10. Corrected max insulation range for OCEAN applicator 2266112. (is) 3.56 (was) 3.55	24-Jan-18	SS	DM
С	Page 7. Add pre-lube requirement Section J.	20-Sep-19	JA	IG
D	Page 2, Section 2.4. Added 408-8059	02-Oct-20	DM	IG
Е	Page 5. Added note at bottom under section X-X Page 10. Added Appendix A Crimp Cross Sections	18-Jan-21	DM	IG
F	Page 1. Added pin and socket reel payoff in Figure 1	06-Feb-21	DM	IG

Rev F 12 of 12