

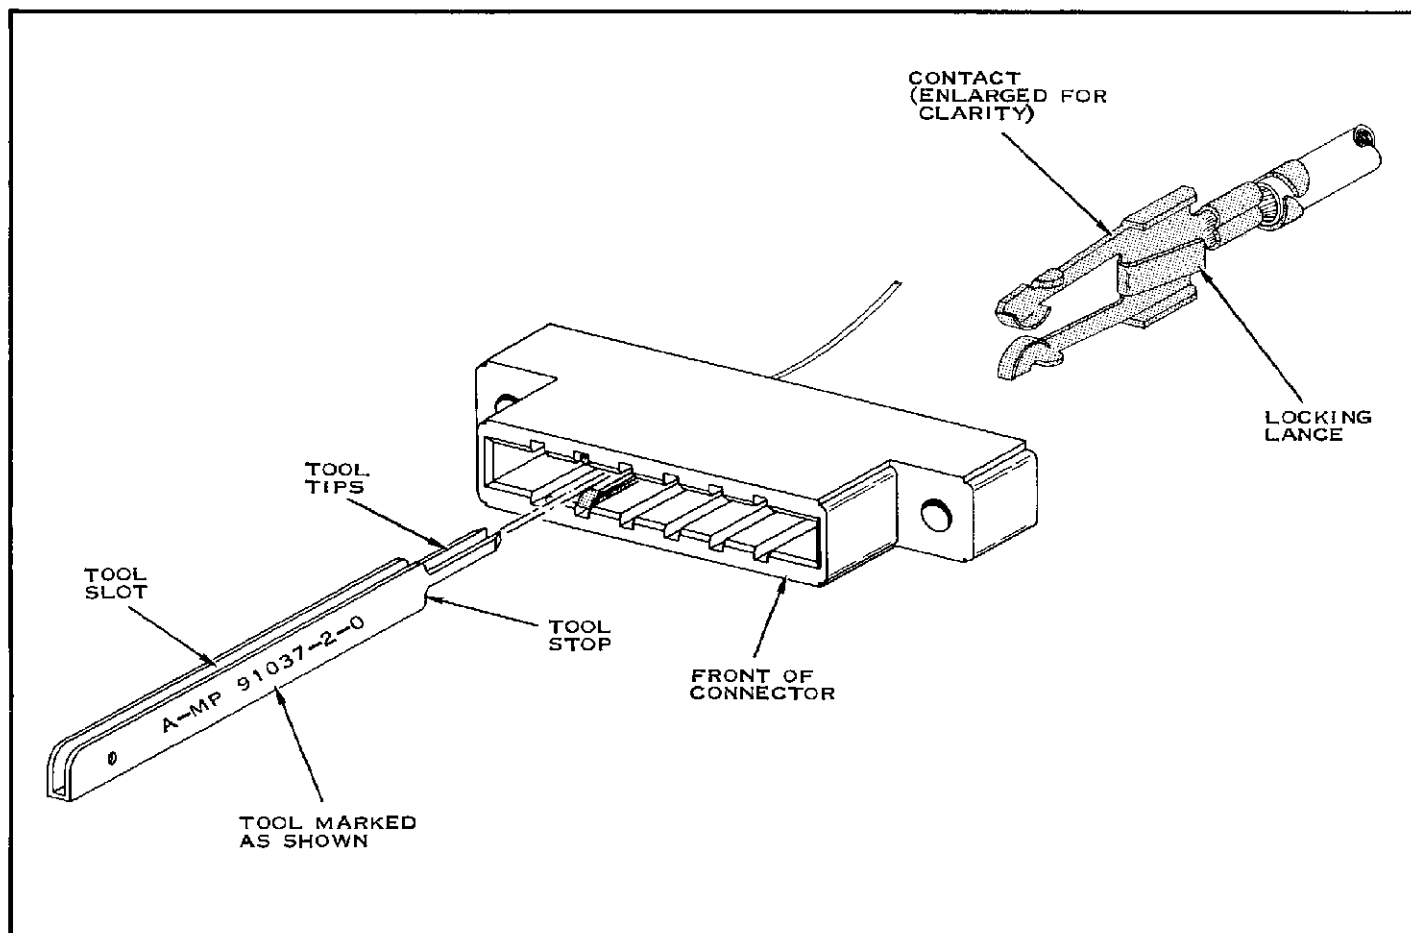


FIGURE 1

1. INTRODUCTION

The A-MP Extraction Tool 91037-2 is designed to remove Modified Fork Contacts from Connectors having .156 inch centers. The tool can be used with the Slot UP (as shown) or DOWN.

2. EXTRACTION PROCEDURE

Determine the contact to be removed then proceed as follows:

1. Align the tool so that contact will enter between the Tool Tips as shown in Figure 1.
2. Insert the Tool Tips straight into the cavity until the Tool Stop bottoms on the Connector.
3. Remove the contact by pulling back gently on the applicable wire. The contact will come out easily.
4. Remove the tool from the connector.